


**1** Remove the outer box.




**2** Cut the tape, remove the top foam, and unpack accessories.

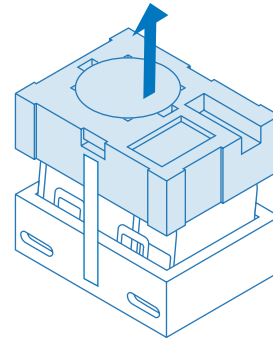


**3** Use the cardboard slings to lift the machine off of the base.




**4** Carry machine to your workbench or table.

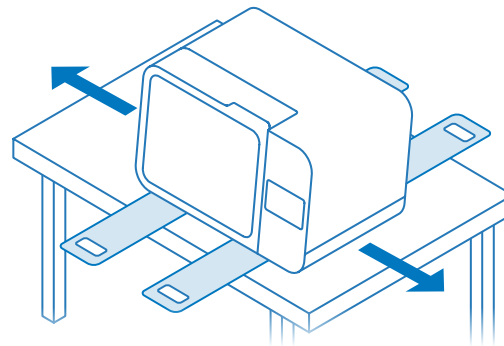


**5** Slide the cardboard slings out from under the machine.

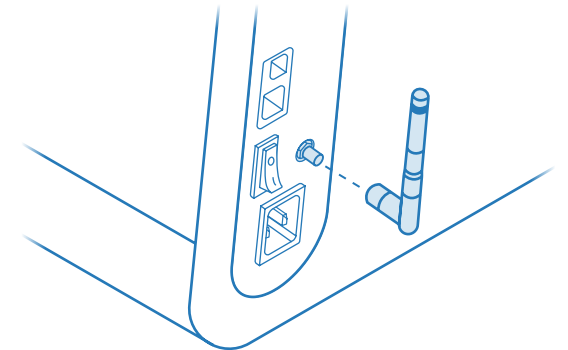


**6** Connect the wifi antenna.

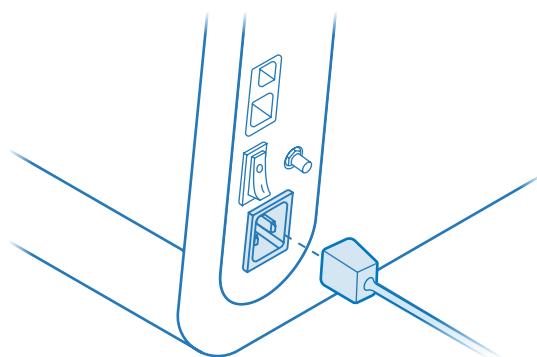

**7** Connect the power cable to the machine and an outlet.

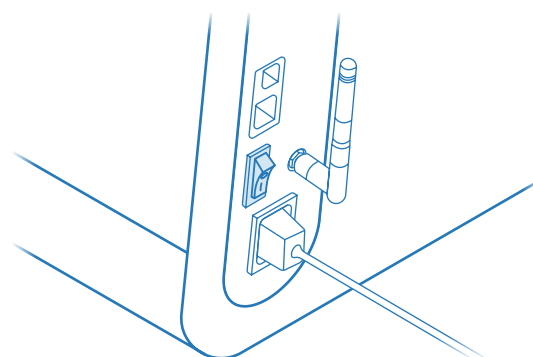

**8** Power on the machine.

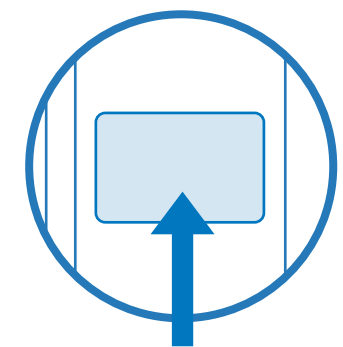

**9** Refer to the screen for further instructions.